



VisionLink Unified Fleet Asset Status Quick Reference Guide

VisionLink Asset Status*	Description
Alternate Power	Main power is removed from the device (such as the master disconnect switch opened), and the device is now running on its backup battery. This status is available only for devices with a backup battery, such as a PL542 or PL240B.
Asset Off	The last status message received from the asset is the engine has stopped.
Asset On	The last status message received from the asset is the engine has started.
Awaiting First Report	Subscriptions have been added for the device, but no new telematics data has been recorded since subscriptions were added.
Manual	The asset has a Manual Maintenance subscription.
Not Expected to Report**	Main power is removed from the device, and the device has been running on its backup battery long enough to generate at least one scheduled report before the backup battery is discharged. This status is available only for devices with a backup battery, such as a PL542 or PL240B.
Not Reporting	The device has not reported data for 7 days or more.
Reporting	The device has reported data within the last 7 days. This status typically is shown for devices that do not support (or have not reported) Asset On / Asset Off statuses.

*Devices and subscriptions determine which asset statuses are reported to VisionLink Unified Fleet. For example, devices with VisionLink Daily subscriptions report only **Reporting** / **Not Reporting** statuses. These devices do not report **Asset On** / **Asset Off** statuses.

If the last status message received from the device is **Not Expected to Report or **Alternate Power**, the asset status will *never* change to **Not Reporting**. Instead, the **Not Expected to Report** or **Alternate Power** status remains in effect until the device reports a different status.

This Asset Status Quick Reference Guide provides a high-level overview. For more detailed information, see the VisionLink Unified Fleet Help.

